

**REP-REP-RAE8713M47T2-1332051 Replacing fuel filter (M47T2, M57T2)**

---

VIN: XXXXXXX Vehicle: 3/E90/SEDAN/335d/M57/AUTO/USA/LL/2010/10

System 3.42.40.11060 Data R3.42.40.11060


Version: Version:

---

13 32 051

**Replacing fuel  
filter (M47T2,  
M57T2)****Necessary preliminary tasks:**

- Switch off ignition.
- [Remove](#) rear underbody protection.

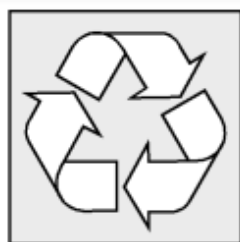**Recycling:**


Catch and dispose of escaping fuel.  
Observe country-specific waste disposal regulations.

Release clamp (1).

*Installation note:*

Check clamp, replacing if necessary.

Pull off hose.

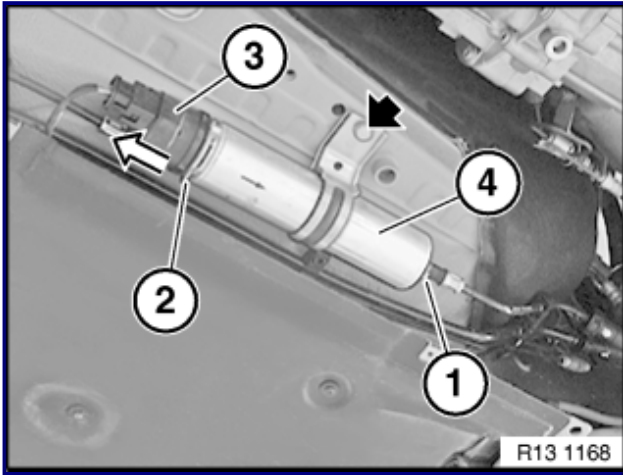

Pull out retainer (2).

Detach fuel preheating (3) in direction of arrow.

Release screw and remove fuel filter (4).

*Installation note:*

Modify retaining clip.



Reassemble the vehicle.

**Installation note:**

Venting fuel system:

Switch ignition on and leave switched on for approx. 1 minute.

During this period of time, the fuel pre-supply pump will be activated and the line to the high pressure pump will be bled.

Check fuel system for tightness.