

REP-REP-RAE6511M57T2-1128010 Removing and installing / replacing drive belt for alternator (M57T2), VIN: XXXXXXXX

ISTA system version	4.02.14.17970	Data version	R4.02.14.17970	Programming - data
VIN	XXXXXXXX	Vehicle	3/E90/SEDAN/335d/M57/AUTO/US/LL/2010/09	
Int.lev.works	-	Int.lev.(cur.)	-	Int.lev.(tar.) -
Mileage	0 km			

11 28 010

Removing and installing /
replacing drive belt for alternator
(M57T2)



Necessary preliminary tasks:

- Remove [fan cowl](#)
- Remove [air conditioning compressor drive belt](#)



Check drive belt for coolant and oil residues, replace if necessary.

Important!

The drive belt must be replaced if it is contaminated with hydraulic fluid.



Note:


If the drive belt is to be reused, mark direction of travel and reinstall drive belt in same direction of travel.

Important!

Belt tensioner is under spring pressure.

Press belt tensioner (1) back in direction of arrow.

Remove drive belt (2).

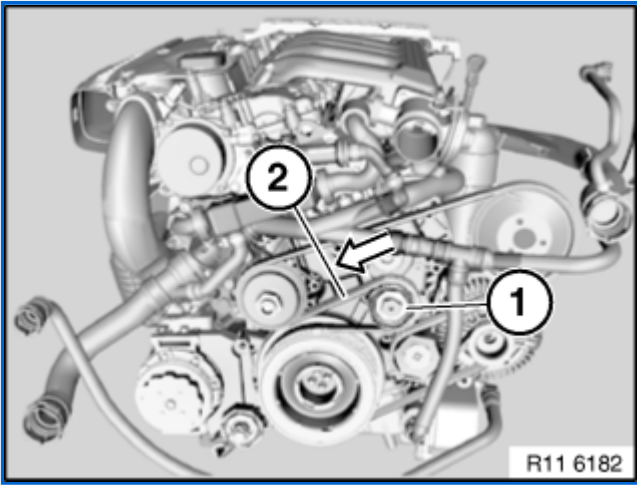

Assemble engine.