

On/off, settings

Switching car radio on/off



The car radio will select the audio source that was last used: radio, CD player, CD changer* or external audio device.

Listening to the radio with the ignition switched off

Radio functions can be accessed for approximately 20 minutes after the ignition has been switched off.

Switch the car radio back on to do so.

To save on battery power, ensure that the car radio is switched off when you leave the vehicle.

Adjusting the volume



The setting is stored for the remote control key currently in use.

As soon as you begin talking on the phone using the hands-free system, the car radio switches to mute.

Adjusting the speed-dependent volume

The speed-dependent volume control automatically raises the volume as vehicle speed increases. You can set the volume increase in several levels.

1. Press the key.
2. Press the key if necessary.
3. Press the key.
4. Select the desired volume and press the right-hand rotary button.

Adjusting the volume for external audio sources

An external audio device such as an MP3 player can be connected to your car radio and played over the vehicle loudspeakers. You can adjust the volume on the car radio.

The required AUX-In connector is located in the center console, refer to the Owner's Manual for Vehicle.

To adjust the volume of the external audio device to that of the car radio:

1. Press the key.
2. Press the key.
3. Press the key.
4. Select the desired volume and press the right-hand rotary button.

Setting the sound quality

You can choose from the following settings:

- ▷ Bass
- ▷ Treble
- ▷ Balance: volume left/right
- ▷ Fader: volume front/back

HiFi System Professional*

The treble and bass settings can be adjusted separately for each audio source. When the audio source is changed, the last sound setting used for the particular audio source will be called up.

The volume balance settings – front/back and left/right – apply to all audio sources.

The bass and treble settings are stored for the remote control key currently in use.

Adjusting bass, treble and balance

1. Press the key.
2. Select the desired sound setting and press the right-hand rotary button.



3. Adjust as required and press the right-hand rotary button.

HiFi System Professional*

Selecting a sound pattern

You can choose from the following sound patterns:

- ▷ Music
- ▷ Cinema

To select a sound pattern:

1. Press the key.
2. Press the key.
3. Press the key for the desired sound pattern.

Equalizer

1. Press the key.
2. Press the key for the desired frequency range.
3. Make the settings and press the right-hand rotary button.

To reset the settings:

1. Press the key.
2. Turn the right-hand rotary button.

3. Press the key.

Resetting the sound settings

The sound quality settings can be reset to the midrange values:

- ▷ Bass, treble and HiFi System Professional for the current audio source
- ▷ Volume balance – front/back and left/right – for all audio sources

To reset the sound quality settings:

1. Press the key.
2. Press the key.

Time

The time can be displayed for approx. 8 seconds when the ignition is switched off.

Displaying time

Press the key.

Setting the time, date and time format

You can set the time, date and time format:

1. Press the key.
2. Press the key.
3. Press the key.
4. Press the required key.
5. Make the settings and press the right-hand rotary button.