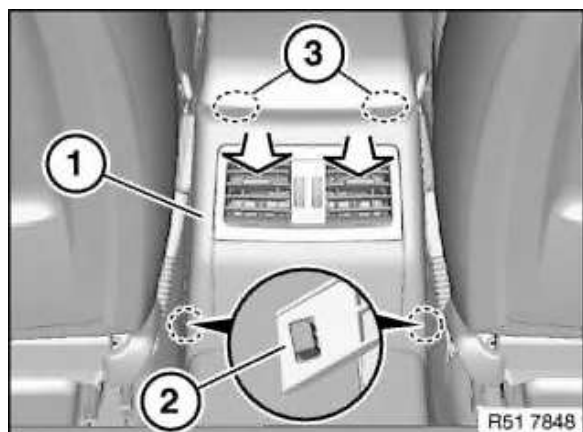
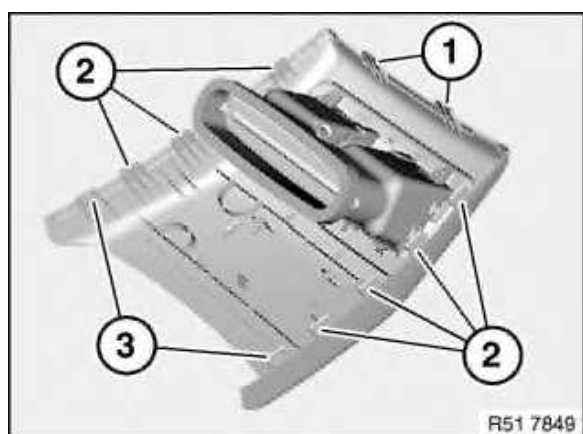
*Necessary preliminary tasks:*

- Move both front seats forwards

**Important!**

Grip behind trim (1) from below and release catch (2) (risk of damage).


Pull trim (2) towards rear and release from catches (3).

*Installation:*

Catches (1 and 3) must not be damaged.

Guides (2) must not be damaged.

If necessary, release rear compartment fresh-air grille in order to install trim correctly.

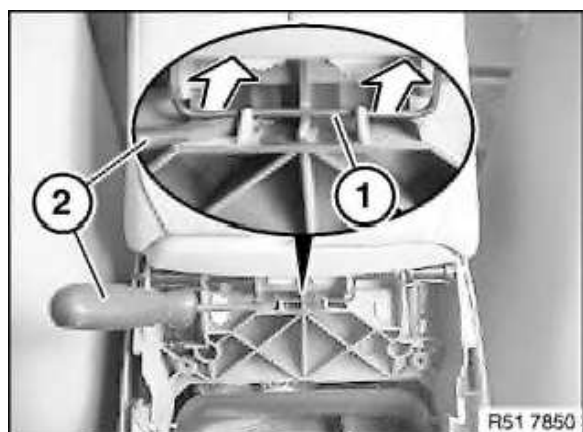
*Note:*

Open centre armrest otherwise spring (1) will be under too much tension.

Disengage spring (1) with screwdriver (2).

Installation:

Make sure spring (1) is correctly seated.

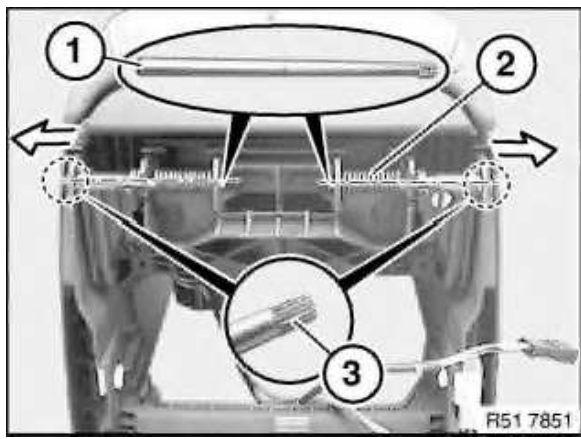

Drive out hinge shafts (1).

Note:

Hinge shafts (1) are secured on the outside with tothing (3).

Remove spring (2), open centre armrest and feed out of storage compartment.