


RISS ROR RACING

335i SCOOP INSTALLATION INSTRUCTIONS

Tools:
Hook Tool
Flathead Screwdriver
T20 Torx bit
T27 Torx bit
1/2mm Socket
1/2mm wrench
7/16mm Socket
7/16mm wrench

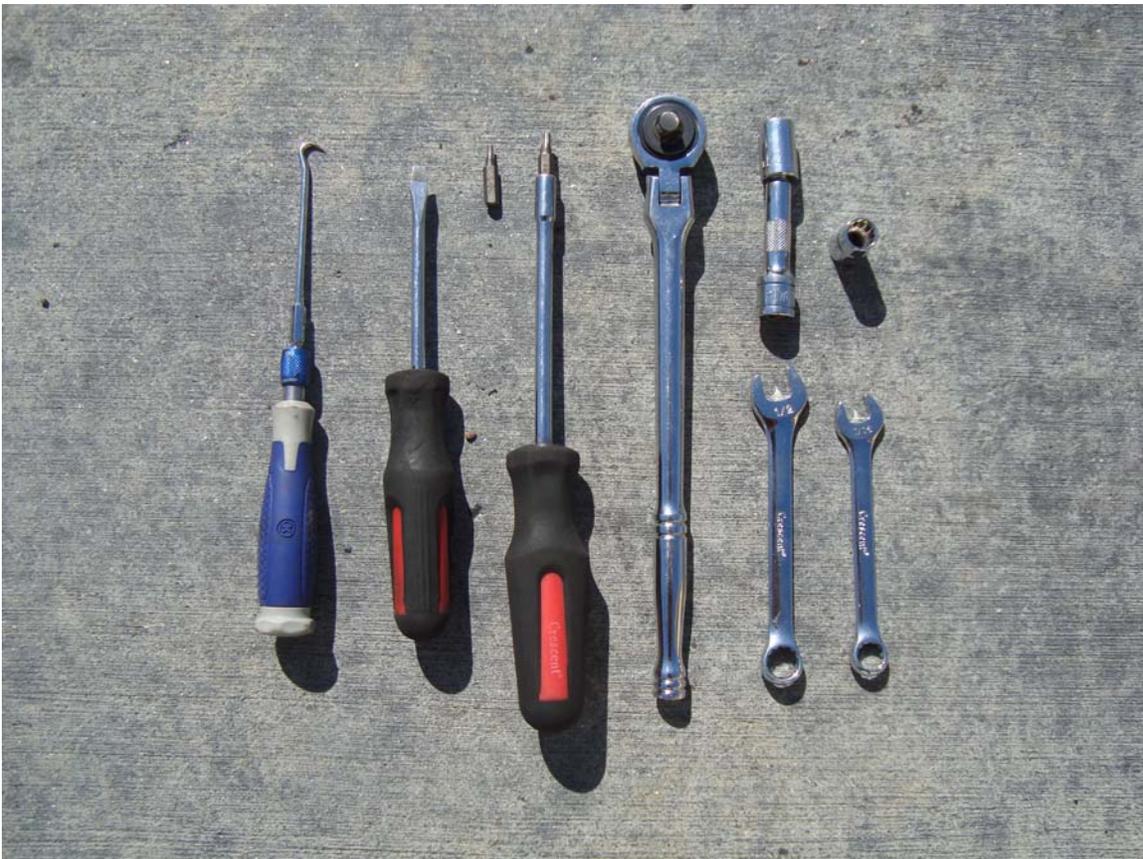

-Use the T20 Torx to remove 2 screws which fasten the snorkel piece



-Use a flathead screwdriver to unclip 2 clips that fasten the air vents by lifting the center pin first and then the rest of the clip.





-Remove the air duct




-Use the T27 Torx to remove 4 screws that hold the top bumper cover in place to gain access to the tabs which hold in the kidney grills.



-Now it is time to remove the grills. Each side has 6 tabs – 3 on top, 1 on the side and 2 on the bottom.




-The top 3 tabs can be accessed through the top of the bumper. Use the hook tool to push down on each tab to release. Work your way around keeping pressure pulling off.

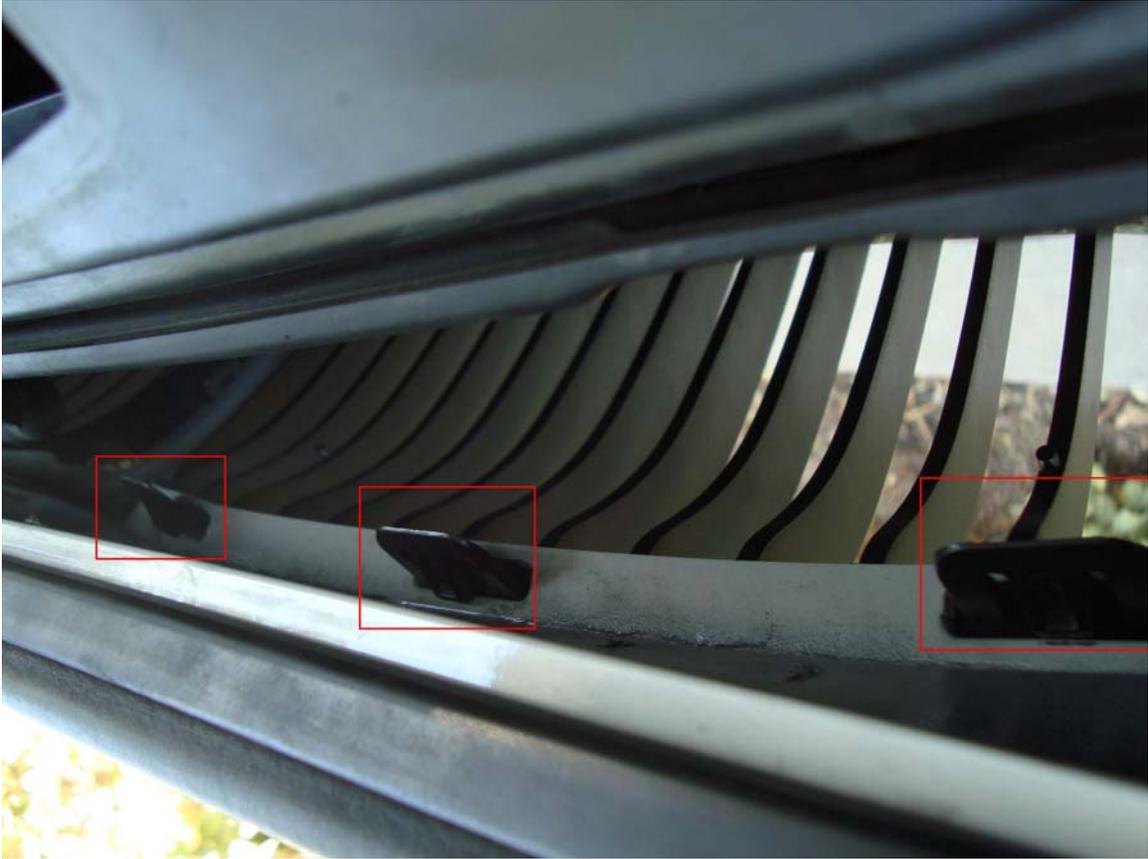

-Here is a view from the top showing the 3 tabs that need to be released with the hook tool on the bottom of the grill.



-Remove the 2 front center threaded clips by slightly lifting with the hook tool and pushing off towards the front of the car.

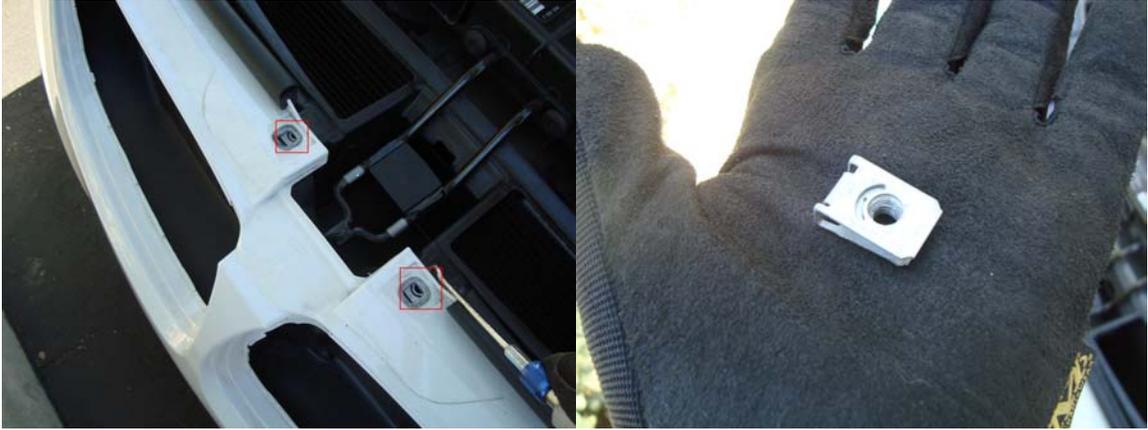

-Put each scoop in place and thread the larger 1/2mm nut and bolt by hand.



-Replace the air vent and thread the smaller 7/16 nut and bolt



-Using the 1/2mm Socket and wrench to tighten the bolts on the bumper.



-Using the 7/16mm Socket and wrench to tighten the bolts on the air vent.



-Reinstall Grills and use the T27 Torx to tighten down 2 OEM bumper bolts.



- Use the T20 torx bit to reinstall OEM bolts on snorkel piece.

