

REP-REP-RAE9011M57T2-1123010_SCR Removing and installing/renewing vibration damper (M57T2-SCR), VIN: XXXXXXXX

ISTA system version	4.02.14.17970	Data version	R4.02.14.17970	Programming data	-
VIN	XXXXXXXX	Vehicle	3/E90/SEDAN/335d/M57/AUTO/US/LL/2010/09		
Int.lev.works	-	Int.lev.(cur.)	-	Int.lev.(tar.)	-
Mileage	0 km				

11 23 010

Removing and installing/renewing vibration damper (M57T2-SCR)




Special tools required:

- 11 8 182
- 11 8 183



Necessary preliminary work:

- Remove [fan cowl](#)
- Remove alternator [drive belt](#)

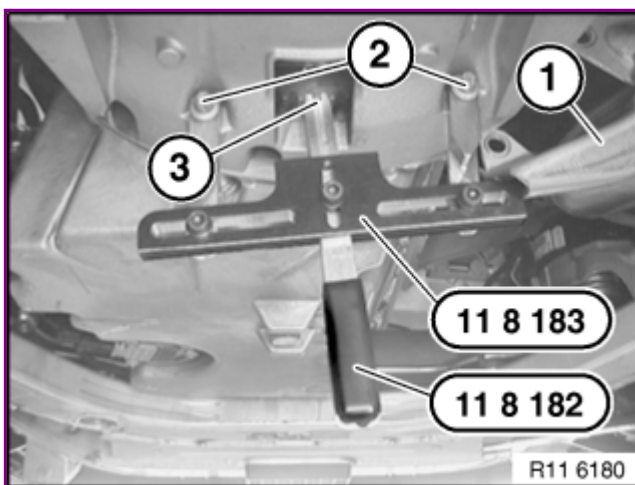

Move special tool 11 8 183 to gearbox (HP 26).

Detach exhaust bracket (1) from gearbox.


Fit special tool 11 8 183 and 11 8 182 at gearbox bolts(2) anbauen.

Adjust special tool 11 8 182 at flywheel spline (3).

Release screws (1).

Remove vibration damper (2).

Tightening torque [11 23 2AZ](#).

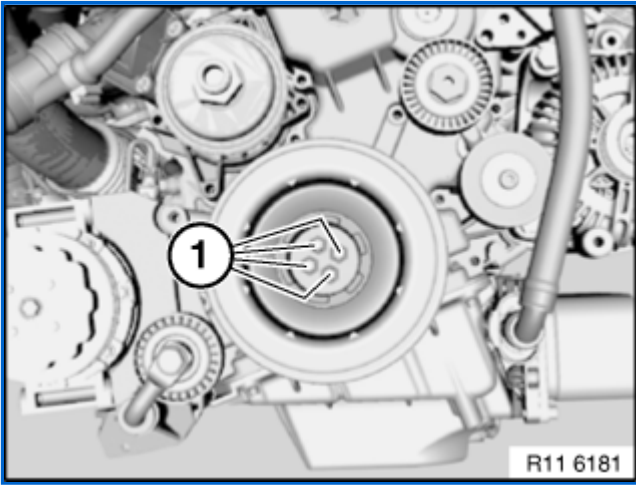

Installation note:

Replace screws.

Tighten screws crosswise.